
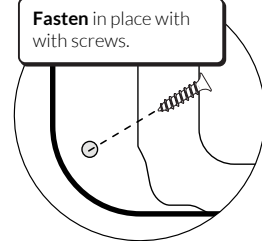
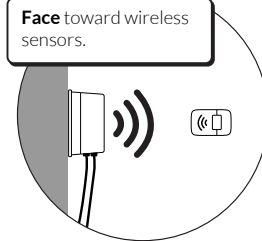






BRNKL Mate Quickstart

MO313002021




1 Install hardware

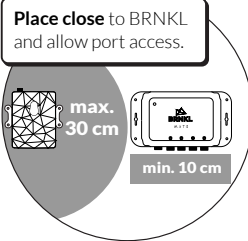


2 Connect wiring

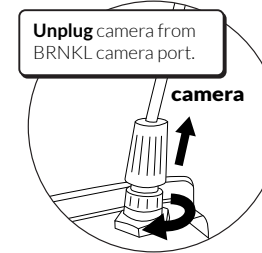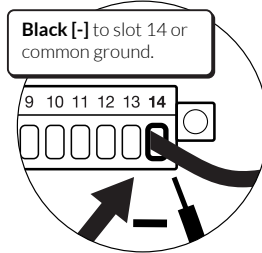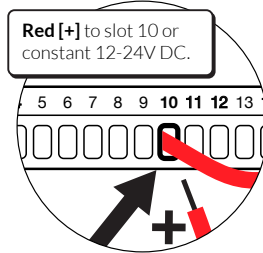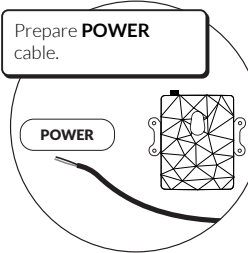

Warning
Disconnect all AC power sources before accessing electrical panels, switches, or devices.

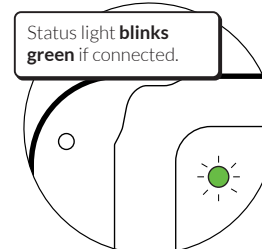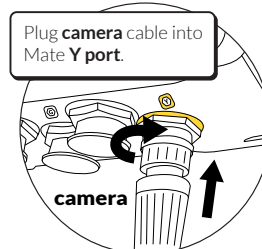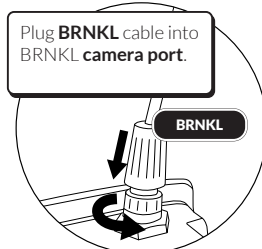


3 Open BRNKL

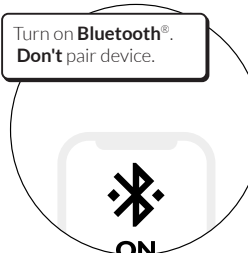


Stay within 5 m (15 ft) of the Mate during this process.


Open BRNKL.

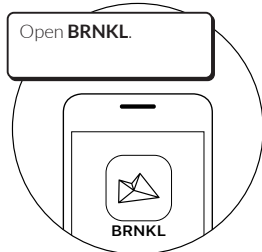

From Settings, select Add Device.

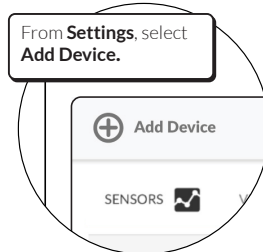


Select BRNKL Mate, follow instructions.

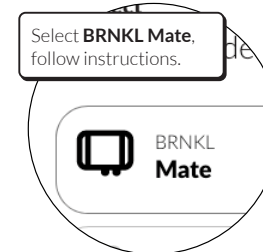






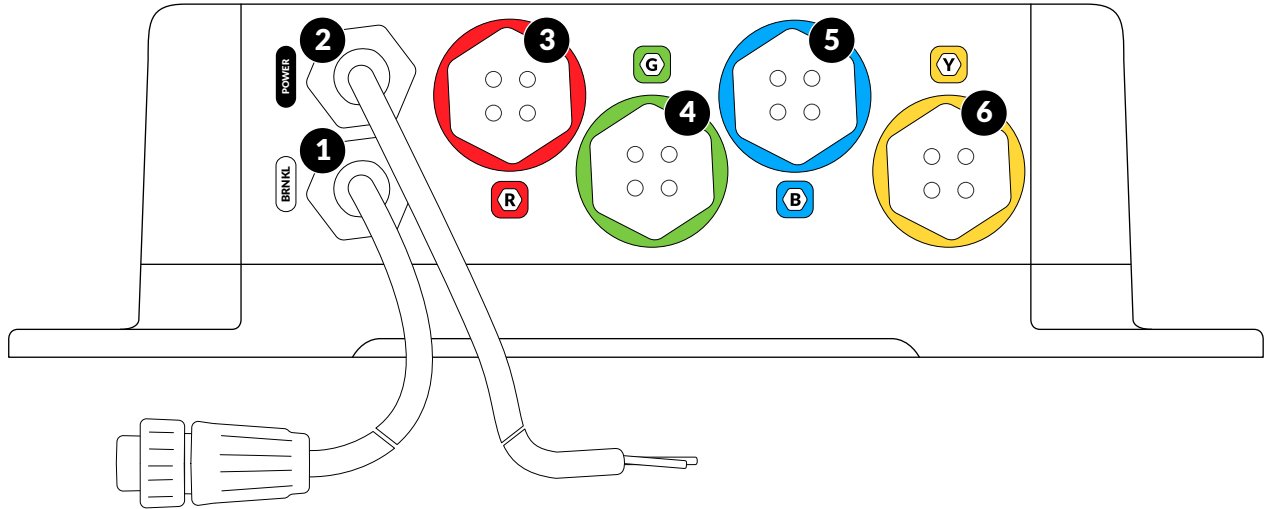 









Go to help.brnkl.io for more help.

BRNKL Mate Connections



BRNKL12021

Terminal	Connection
1 	 BRNKL 
2  	 Constant 12-24V DC fuse-protected power  Common ground
3 	 Multipurpose
4 	 Multipurpose
5 	 Camera 2
6 	 Camera 1

Copyright 2021, Barnacle Systems Inc. BRNKL is a trademark of Barnacle Systems Inc.

Go to help.brnkl.io for more help.