




BRNKL Rapid Deploy AC

Quick Reference


RDQR1002023

Power settings


Prepare

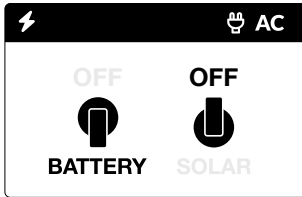


Transport

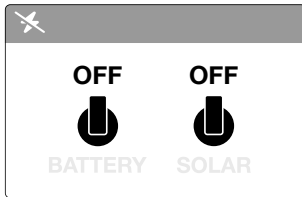

Deploy

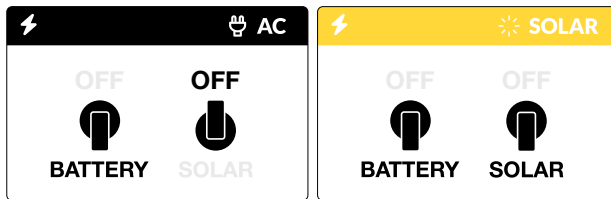

Store

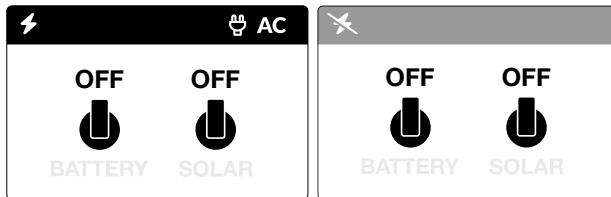


Solar charge indicator


Connected Charging Low voltage

Device settings

Float switch

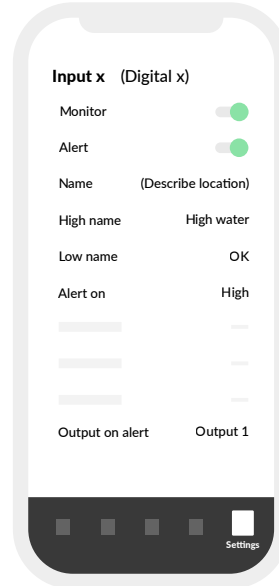

Door sensor

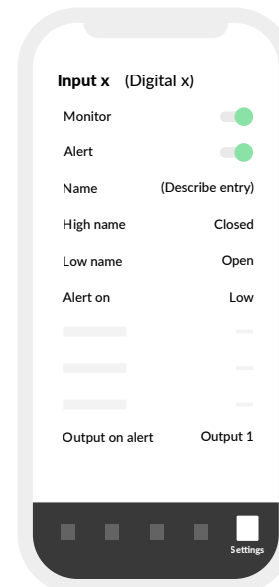

Get more help at brnkl.io/help






BRNKL Rapid Deploy AC

Connections

RDA-100-0023

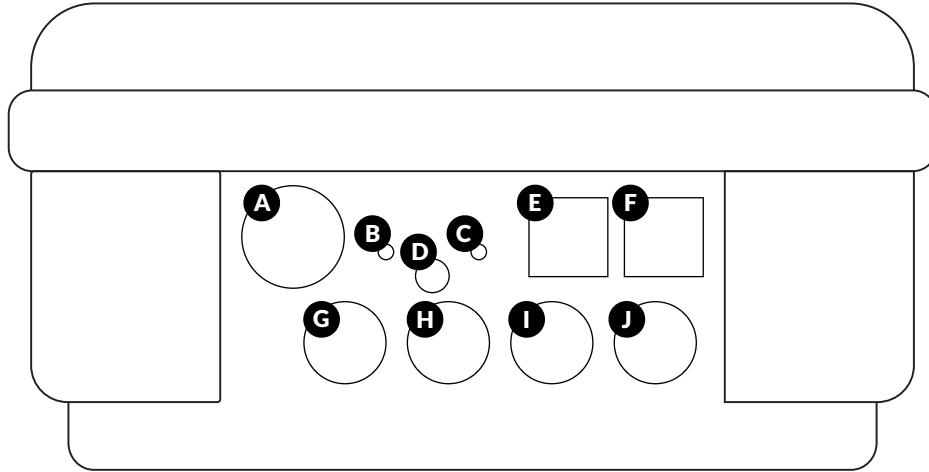

Terminal	Connection
A AC	AC 110-240 V
B CELL	Antenna 4G cable
C GPS	Antenna GPS&BD cable
D SERIAL	Satellite device serial cable or camera
E SOLAR	Solar panel
F SAT	Satellite device power cable
G INPUT 1	
H INPUT 2	
I INPUT 3	Float switch, door sensor
J INPUT 4	

Copyright 2023, Barnacle Systems Inc. BRNKL is a trademark of Barnacle Systems Inc.

Get more help at brnkl.io/help

